



# **INSTALLATION MANUAL**

## **OzFLARM Situation Awareness UNIT**

### Status

FLARM Software Version 3.07 (March, 2007)

OzFLARM Software Version 1.005 (Jan,2006)


© 2003-2006 FLARM Technology  
© 2005-2006 RF Developments Pty Ltd  
Boonah, Queensland, Australia  
[www.rf-developments.com](http://www.rf-developments.com)

**Version Control.**

- 1.0**            **Initial release**
- 1.01**          **Revised Power up sequence notes. OzFALRM software now 1.004**
- 1.02**          **Include version 2 hardware references**
- 1.03**          **Tidy up power connection references**
- 1.04**          **Correct dataport wiring mistakes**

## **1. Welcome to the community of FLARM users**


Thank you for purchasing OzFLARM, a modern low-cost situation awareness unit for sailplanes and light aircraft. The main task for OzFLARM is to support the pilot, while the pilot scans the airspace ahead with his own eyes. FLARM is simple to use and does not distract the pilot from the main responsibility in hand.

 Sport flying is an activity that is associated with considerable risks for crew, passengers, third parties and other objects. **In order to make full and safe use of OzFLARM, it is absolutely essential to be fully aware of the risks, operating conditions, restrictions and limitations associated with the use of OzFLARM. This includes familiarity with and observance of the Operating Manual and this Installation Manual.** Additional configuration information can be found in the 'Data Port Specifications' document.

We always welcome suggestions for the improvement of OzFLARM.

The latest version of this handbook and other related documents can be found at the Website [www.rf-developments.com](http://www.rf-developments.com). This Website also has answers to Frequently Asked Questions.

This Website also carries announcements when new software versions or functions are available. If you enter your name on the mailing list, you will automatically receive notification of changes as and when they happen: [support@rf-developments.com](mailto:support@rf-developments.com)

 **Software-Versions FLARM 2.x will only remain operational until the end of February 2006.** On publication, the update will have no functional changes and can be downloaded free of charge ( current update is version 3.xx valid till Feb,2008 ). Users will be able to load the software with the aid of a suitable power supply/data cable (not supplied). This operation requires the user to have the unit serial number to hand. Software validity has to be time-limited to ensure that all FLARM units are mutually compatible and updates include the latest ground obstruction data.

## **2. How it works**

Basically the OzFlarm unit consists of 2 core modules. The first is the FLARM microprocessor. This controller is identical to the SwissFlarm system being used in Europe. The technology utilises the tried and proven "Aircraft risk prediction Algorithms" and obstacle database. Additional to this OzFlarm also uses the standard Flarm datalogger feature. Software updates are performed via the Flarm port which has identical connections to the Swiss Flarm unit. The second module is the OzFLARM interface. This micro handles the OzFlarm compass display and beep alert. Additional to display functions it has a future upgrade path when coupled to a suitable ADS-B receiver, to start receiving and displaying ADS-B targets. OzFlarms micro also looks after the housekeeping, power management etc. Updates to OzFlarm are performed via the OzFlarm dataport. The same download cable can be used as in the Flarm port, both are pin identical. Additional to providing access to the micro we also have an NMEA port available for connection to a moving map display or other glide computers or PDA's.

Note: This system is by default 100 percent compatible with FLARM from Europe. Europe and Australia operate on a different frequency, contact FLARM if you require changing to the Australian channels if you already have a Swiss Flarm unit. OzFLARM units going overseas in gliders for competitions, we can re program your units to suit. Note that due to the different frequency span both systems will be degraded slightly due to matching, however, they will still achieve a satisfactory result.

OzFLARM receives position and movement information from an internal 16 channel GPS receiver with an internal antenna ( external can be connected by selecting the appropriate antenna switch configuration, see appendix A ). A pressure sensor<sup>1</sup> further enhances the accuracy of position measurements. The predicted own flight path is calculated by the FLARM micro and the information transmitted by radio, as a low power

---

<sup>1</sup> Requires Hardware Version 2 or higher. However, the vertical bearing on the serial data output is also available to third-party equipment on Hardware Version 1.

digital burst signal at one-second intervals. Provided they are within receiving range these signals are received by further aircraft also equipped with OzFLARM. The incoming signal is compared with the flight path calculated and predicted for the other aircraft. At the same time, FLARM micro compares the predicted flight path with known data on ground obstructions, including electric power lines, radio masts and cable cars ( only if the obstacle database is loaded ).

If FLARM determines the risk of dangerous proximity to one or more aircraft or ground obstructions, the unit gives the pilot warning of the greatest danger at that moment. The warning is given by a Dee Dah sound (2 tone high - Low), The relative direction LED rose will light depending on which direction a target is received. Typically and green leds represent 1km or further away targets, and are not deemed dangerous. Red indicates targets within 1Km and flashing red indicates a potential threat.

The operating range is very dependent upon the antenna installation in the aircraft. The normal range is about 2 km, but up to 5 km may be achieved in individual cases such as ground stations ( use of external high gain antennas, see options on RF Developments website ).

The GPS and aircraft situation coordinates of the other aircraft can also be made available for use in other systems (e.g. external display, speech synthesizer, PDA) via a serial data output. There are a number of manufacturers for such equipment.

In addition, OzFLARM operates as an IGC-compatible flight data recorder if this software option has been configured ( logger is not IGC approved but fully functional including pressure height recording).



### **3. General Advice on Installation**

Installation and operation must be on the basis of non-interference with and no hazard to the existing suite of other certified equipment necessary for safe flying operation, or installed to comply with official requirements. Installation and operation must comply with official regulations and requirements. When OzFLARM is permanently installed in an aircraft, the installation must comply with the 'Installation Policy' published by the Civil Aviation and Safety Authority (CASA).

OzFLARM must be secured in such a position that the pilot has the display LEDs in direct view, that he can hear the acoustic warning tone and operate the control buttons. OzFLARM must not obstruct the piloting operation and in particular it must not hinder his field of view. These requirements must be maintained at all times during conditions of strong turbulence and acceleration. OzFLARM is not suited for use in conjunction with night vision systems, night flying (no dimmers) or in pressurised cabins.

Ideally, OzFLARM will be installed under the instrument panel on the central console or on the cockpit sidewall. The rear face of OzFLARM must face in the direction of flight. If OzFLARM is also equipped with an external display and operating unit, then it may be installed elsewhere and another orientation. Usually, such an installation requires an external radio and GPS antenna.

It is usually best to install OzFLARM in such a position that the Power/Data socket are easily reached from a PC with an extension cable. This simplifies downloading the latest ground obstruction data and software and configuring the unit. When updating software, the user must know the unique OzFLARM unit serial number.

If possible, OzFLARM should be so installed that the pilot does not inadvertently touch the push button during cockpit ingress and egress.

Cables must not be folded or be under tension. The installation must allow adequate space for cable connectors and the external vertical antenna.

OzFLARM, the external radio antenna and the GPS antenna ( optional ) should each be installed at least 10 cm away from the magnetic compass, more if possible.

After installation, an appropriate entry should be made in the aircraft technical logs as to reflect an installation performed under a "no interference, no hazard basis" as is the case for glide computers and PDA displays, as well as other GPS devices. You as the installer must observe this rule. Additional tests under a no interference basis might include the operation of the radio and a check that OzFlarm causes no interference to its normal operation. Checks that other aircraft systems do not interfere with OzFLARM are also needed. The best method is to fly with a friend at a distance around 2 kms, make sure all systems are off ( i.e. other GPS, vario and glide computer), observe his lit target LED and maintain that distance. Turn on each piece of equipment and note any change. Acceptable operation is one that is not affected by other devices. Should a problem occur then consult our FAQ page.

## 4. Housing

The lower face of the housing has two threads, so that OzFLARM can easily be secured with two M5 screws (no more than 10 mm long). This thread is in widespread use in gliding and 2 screws are provided with each unit. OzFLARM should be installed on a flat surface so that the housing is not subject to any mechanical stress. Make sure the top area of the housing is not covered by any ferrous material as the internal GPS antenna is housed here. If it has to be mounted lower in the panel or covered then use of the optional external antennas will be required. These can be purchased on the web site.

The housing can be repeatedly attached and released using the DualLock<sup>®</sup> supplied with the unit. The unit comes supplied with two self-adhesive 12.5x25 mm fixtures. Care should be taken to ensure that the bonding strength is very strong on both halves and difficult to detach.

The lower face of the housing also has two Phillips screws that hold the two halves of the housing together. These screws must not be over-tightened. Avoid opening the case unless you need to ( i.e., select external GPS antenna option ) If you need to select the GPS antenna option, please do not over-tighten the PCB to housing screws.

Should the unit become wet, it should be thoroughly dried prior to use. Should the unit be massively cooled condensation may occur. The housing should only be cleaned with a slightly moist non-abrasive cloth without any cleaning agents. Scratches and abrasion can damage the housing.

The ABS polycarbonate plastic housing is black to minimise glare and has been tested at temperatures from -10 to +60 °C. Efforts should be made to prevent exposure to excessive direct or indirect solar heating. Even if not subject to mechanical stress, the housing may be deformed at temperatures upwards of +84 °C, and can also be deformed at lower temperatures in the presence of mechanical stress. The unit should not be exposed to strong locally focused sun radiation, therefore care should be taken when the cockpit canopy is open (lens effect fire hazard).

\*Note, we recently had units installed on dashes at a comp, the outside temp was only 30 degrees C but inside under the plastic the cases were red hot and deformed! You must provide a cover or mount under the visor on top of the instrument panel otherwise the plastic WILL distort and cause damage.

## 5. Connectors

The red rear face has an MCX socket for an active GPS antenna, an RJ45 Power/Data ( Flarm port ) socket and an RJ45 Extension socket (OzFlarm port ).



## 6. Power/Data

The eight-pin RJ45 Power/Data socket accepts an eight-pin connector (if necessary, a six-pin connector) that is locked in place. The pin connections are largely in-line with those set out in IGC GNSS FR Specifications<sup>2</sup>, so that the same cables may be used both in the air and on the ground, as used for modern IGC-compatible flight data recorders. The key to the connections is defined by the sequence from left to right, not the numbering<sup>3</sup>:

FLARM Port ( left hand side socket )

1. +6 to +26 VDC (recommended +12 VDC), linked with Pin 2 inside the unit
2. +6 to +26 VDC (recommended +12 VDC), linked with Pin 1 inside the unit
3. FLARM supplies +3 VDC
4. GND, with Pin 7 and 8 linked to the unit
5. Tx = FLARM transmits data (PC-side to SUB-D9 Pin 2)
6. Rx = FLARM receives data (PC-side to SUB-D9 Pin 3)
7. GND ('negative'), linked with Pin 8 inside the unit (PC-side to SUB-D9 Pin 5)
8. GND ('negative'), linked with Pin 7 inside the unit

<sup>2</sup> Chapter 2.7.2.2.7.2, [www.fai.org/gliding/gnss/tech\\_spec\\_gnss.pdf](http://www.fai.org/gliding/gnss/tech_spec_gnss.pdf)


<sup>3</sup> FLARM uses Pin-numbering in-line with IGC specifications. The usual numbering is in reverse order.

During flight operations at least Pins 2 and 7 must be connected. An 8-pole (or if necessary 6-pole) ribbon cable with an RJ45 push-fit connector, or an 8-pole twisted-pair patch cable with RJ45 adapter, are equally suitable. A suitable patch cable open at one end is supplied with FLARM<sup>i</sup> and must be configured to the aircraft connector in the aircraft. When using an 8-pole cable, Pins 1=2 must be joined. Likewise Pins 7=8. If the remaining wires are not used, they must be individually insulated and must not be soldered or twisted together - not even in pairs.


Additional note. On the supplied cables Blue goes to pin 2, orange/white to pin 3 and blue white to pin 5. If making a plug to go to a PDA then use a DB15 male and swap pins 2 and 3.



There must be a direct electrical connection between FLARM and the aircraft battery. This connection must be secured with a 500 mA fuse. Essential electrically operated flight instruments must not draw their power through the FLARM fuse. It must be possible for the pilot to interrupt the power supply to FLARM during flight by means of a switch or circuit breaker without affecting other essential aircraft systems. This might be necessary if the pilot suspects that FLARM may be interfering with another on-board system, the suspected presence of smoke, the smell of smoke, or flying in a country where the use of FLARM is not permitted. In spite of the reverse polarity protection, it is important to check for correct polarity during installation; in particular the power supply and data wires must not be interchanged. The transparent connector allows for a visual check of the cable colour codes, ensuring that the open end of the cable is correctly configured. When using patch cables neighbouring wires on Pins Pin 1/2, 3/4, 5/6 and 7/8 are usually (but not always) twisted together. Neighbouring wires usually have the same colour, though one of the pair has a colour alternating with white.

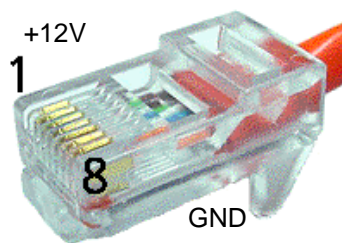

Connector with Pin numbers,  
tab down

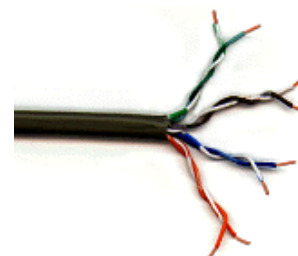

Open ended Patch Cable

In normal configuration Pin 5 transmits the most important NMEA-0183 Version 2.0 compatible GPGGA and GPRMC codes at a fixed data rate of 19.2KB \* **NOTE : under no circumstances must this speed be changed otherwise the display section and alarms will cease to work** (see document 'Data Port Specifications'); from Hardware version 2 also Garmin proprietary PGRMZ codes with barometric altitude information. Further codes are provided for third party applications (e.g. external displays). These are described in a separate document 'Data Port Specifications'. This document also describes how FLARM may be configured. A PC application exists for this called "FLARMTOOL".

A separate P.C downloading program is supplied for updating the OzFLARM display software ( See software manual )

After switching on (Depress UP the ON switch) and the self-test routine, the unit must first capture satellite signals to establish position. Even if the antenna has a clear sky-view, this process can take a few minutes. The GPS LED will be red, extinguishing when it has lock. If it remains red for more than 2 minutes then check that the top surface is not covered by a metallic object. RED LED will stop the FLARM from working! Because the unit can take a minute or two to lock onto a GPS signal a glider tug pilot should leave OzFLARM switched on during brief waiting periods between flights. During night flights OzFLARM must be switched off.

Only the Power/Data socket to the unit may be used for updating FLARM software or obstruction data from the PC. During this process OzFLARM must be disconnected from other equipment.

## **7. Extension**

An 8-pole connector may be inserted in the 8-pole RJ45 socket on the right side looking from the rear. The connections to the pins are the same as for Pins 1 and 8 described above. This socket is intended for use by third party applications (e.g. for glide computers requiring NMEA GPS output or other PDA displays)

Settings for the GPS speed and message type can be done using the FLARMtool software.

FLARM Port ( Right hand side socket )

1. +6 to +26 VDC (recommended +12 VDC), linked with Pin 2 inside the unit
2. +6 to +26 VDC (recommended +12 VDC), linked with Pin 1 inside the unit
3. GPS Data out ( RS 232 levels ) NMEA or Ublox sentences,4800BPS GPRMC and GPGGA
4. GND, with Pin 7 and 8 linked to the unit
5. Tx =OzFLARM transmits data (PC-side to SUB-D9 Pin 2)
6. Rx = OzFLARM receives data (PC-side to SUB-D9 Pin 3)
7. GND ('negative'), linked with Pin 8 inside the unit (PC-side to SUB-D9 Pin 5)
8. GND ('negative'), linked with Pin 7 inside the unit



Note. You can plug into either dataport with the power connection as they are identical and there is no risk of damaging the unit.

## **8. GPS**

All Ozflarm units come with an internal GPS antenna which radiates through the top of the housing, this means that by just adding power the unit will run with no requirement for an external GPS antenna. If you require the use of an external GPS antenna you must do the following:

Hardware version 1 , serial numbers 100 to 199


Remove the 2 housing screws that secure the top lid to the main box, you may have to lightly manoeuvre the lid out to clear the rear plastic lenses.

Locate the GPS board on the top lid, you will note 5 screws holding to the lid. Remove these, carefully note their positions as there are 2 types of screws.


Looking at the component side of the PCB you will notice a 3 position dip switch near the antenna connector. The top and middle switch will be ON, the bottom OFF. Switch the top 1 and 2 to the OFF position ( hard left ) and the bottom switch ON. The external GPS antenna is now selected.

Relocate PCB and insert screws. DO NOT over tighten, a light tension is all that is needed.



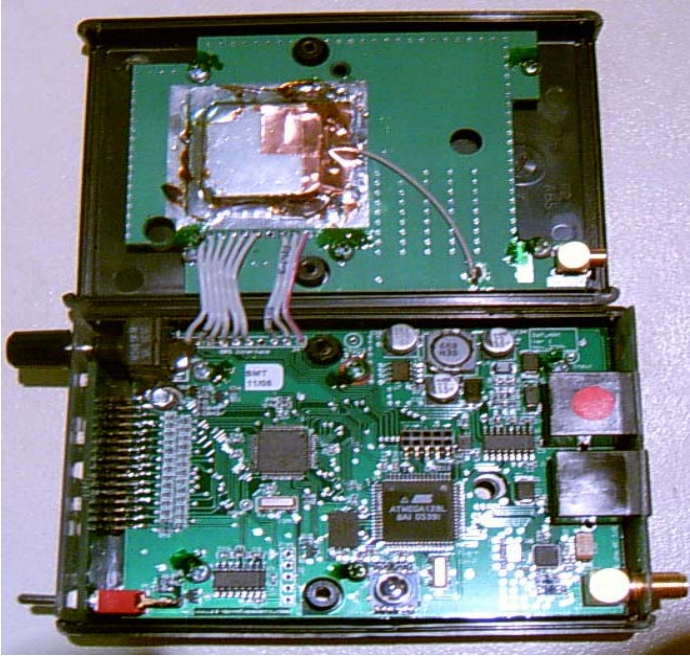


Picture – Both halves open, ready to undo top 5 screws

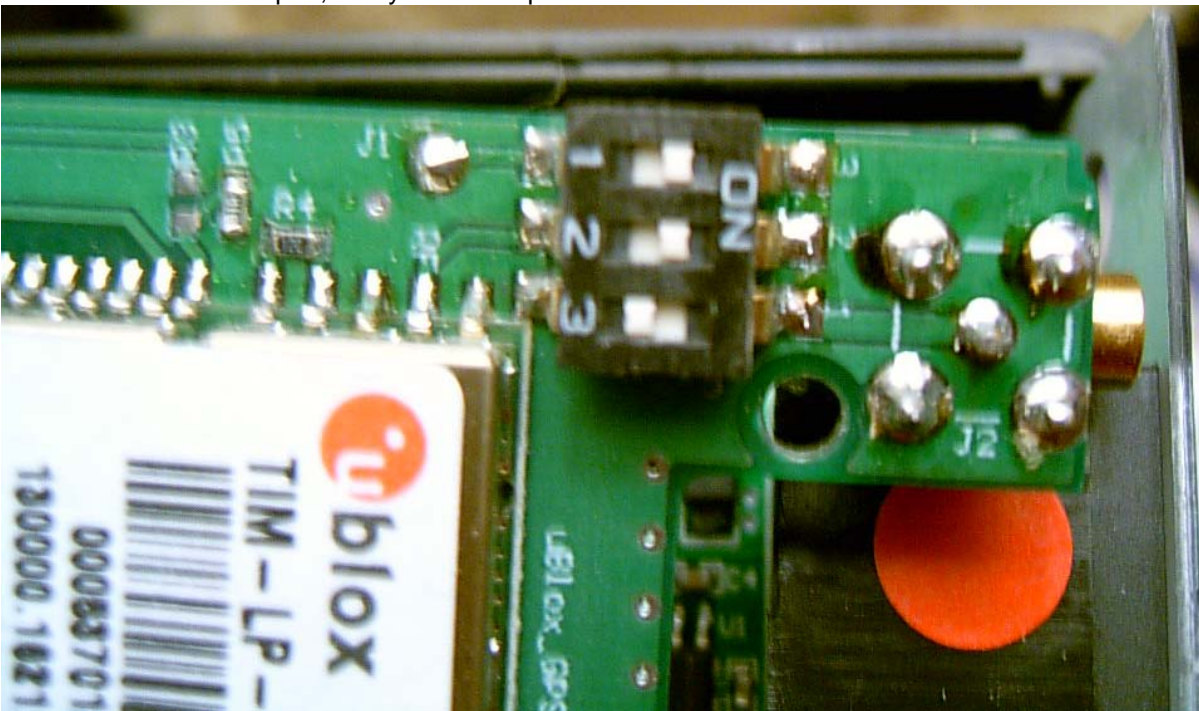

Picture - Default internal GPS antenna selected



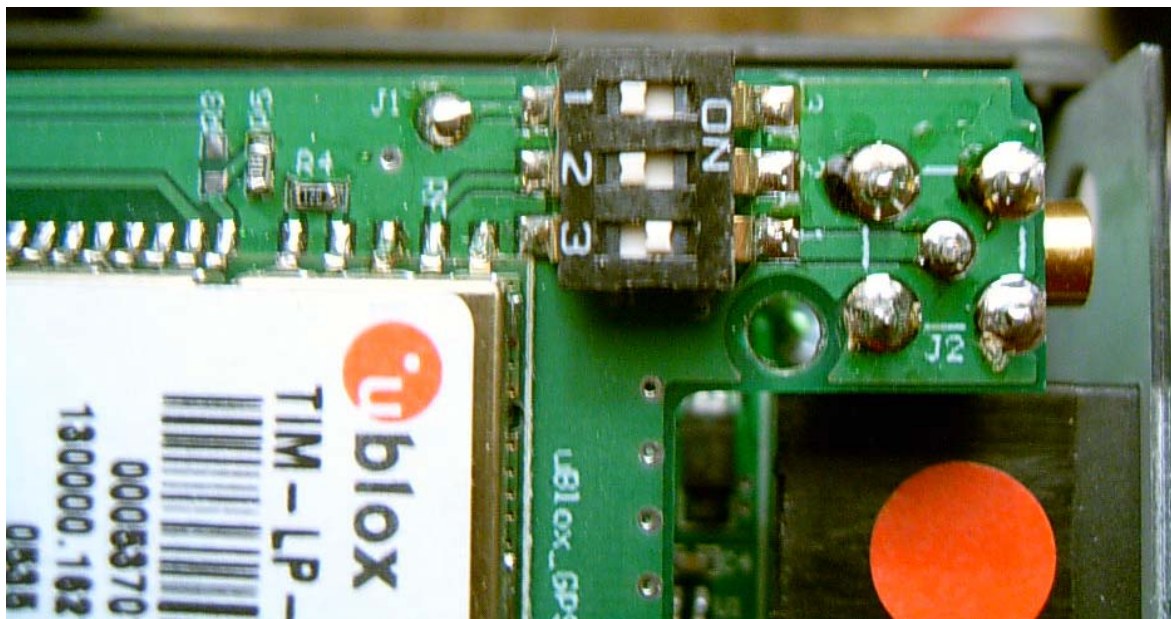

Picture – external GPS antenna selected.

This completes the external GPS selection. Plug in a suitable antenna into the GPS socket on the rear. Antennas can be purchased from RF Developments.

The cable length of the 50Ω RG-174U cable with MCX connector is about 2.5 m; cables of other length are not available from RF Developments. A specialist must undertake any shortening of the cable, which must not be cut to less than 0.5 m.

The external GPS antenna should be horizontal in straight flight and have an unobstructed sky-view, also during turns. The antenna should not have any electrically conducting surfaces (e.g. metal, carbon fibre) above or immediately alongside. Ideally, the antenna will be located on top of the instrument panel. Electrically conducting sheet metal under the antenna may enhance its performance.

The antenna base contains magnets, but nevertheless requires additional attachments. The antenna must under no circumstances interfere with correct compass operation. If the antenna interferes with the compass, the magnets in the antenna base must be removed with a screwdriver and the metallic foil reattached.

If the aircraft is fitted with two or more GPS antennae, they should be separated if possible by at least 25 cm; the same holds good for FLARM radio antennae.

Hardware version 2 , serial numbers 201 to xxx ( current )

Remove the 2 housing screws that secure the top lid to the main box, you may have to lightly manoeuvre the lid out to clear the rear plastic lenses.

Locate the 3 position dip switch on the main PCB. This has 3 slide switches with the defaults being :


- 3 = ON
- 2 = ON
- 1 = OFF

To select external GPS then it should be:

- 3 = OFF
- 2 = ON
- 1 = OFF

To re assemble extreme care must be used. The top lid ( GPS section ) has 10 pins sitting beneath it for insertion into the main PCB. Carefully line these up and at the same time check that the plastic front and rear

lenses are going to line up as well, you maybe need to slightly open one side to see inside that the pins connect . Some care and this will work. If you have trouble return to us with a return pre paid sachel and we will re install for free. If you do not want to attempt this at all then return with pre paid sachel and we will do it at no labour charge.

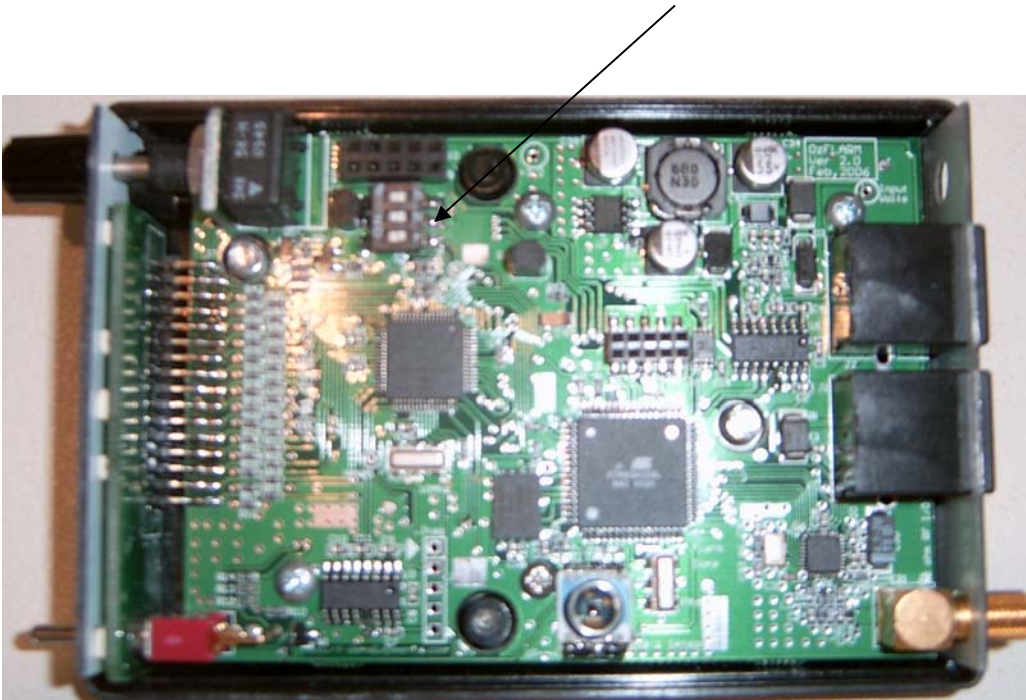



## **9. Radio Antenna**

The rear of the housing has an SMA connector onto which is screwed an 86 mm long internal  $\lambda/4$  radio antenna. The antenna must be fitted and removed with care. This antenna is required for operation of OzFLARM, and the correct installation has a considerable effect upon range for transmission and reception, so the installation must be carefully considered. The antenna must be vertical, allowing generally unobstructed radiation to the front and sides. It is theoretically possible to use an inverted installation, but only when making exclusive use of an external display. Horizontal or inclined installation is not acceptable. In particular, there should be no electrically conducting surfaces (metal, carbon fibre) above or immediately alongside the antenna. The antenna must not be under stress or bent, e.g. by the cockpit canopy).

RF Developments can supply alternative external dipole antennas with 1.0m and 2.5m feed cables, for external installation and antenna extension cables (50 $\Omega$  RG-174U on conventional SMA). No antennae or cables may be used other than those listed above. An external antenna must be adequately earthed to the airframe. Installation may only be in a Zone 2A or 3 as described in DO-160E Section 23.

## **10. Sound Signal**

The front face has a hole to improve the transmission of sound from the internal emitter to the cockpit. This hole must remain unobstructed. There is no intercom connector. The volume control will increase or decrease the audio. Third-party manufacturers manufacture suitable intercom equipment that is compatible with OzFLARM that can give audible alerts for powered aircraft.



## **11. Limitations**

FLARM and OzFLARM are designed and built as a non-essential situation awareness only unit to support the pilot, and cannot always provide reliable warnings. In particular, OzFLARM does not give any guidance on avoiding action. Under no circumstances should a pilot or crewmember adopt different tactics or deviate from the normal principles of safe airmanship. The use of OzFLARM is solely at the discretion of the commander and his crew. Operation must be preceded by thorough familiarisation by the commander or his delegated crewmember with the Operating Manual.

OzFLARM can only warn the pilot of the presence of other aircraft that are also fitted with OzFLARM or compatible equipment, or warn of obstructions that are stored in the internal data bank. OzFLARM does *not* communicate with Mode A/C/S transponders, and remains undetected by ACAS/TCAS/TPAS or Air Traffic Control systems. Likewise, OzFLARM does not communicate with TIS-B, FIS-B or ADS-B.

The use of OzFLARM is at the sole responsibility and discretion of the aircraft commander or his delegated crewmember. Operation must be preceded by full familiarisation with the equipment and careful study of the Operating Manual.

At present OzFLARM is not certified by the Civil Aviation Authorities and has not been tested in accordance with the normal aviation requirements (e.g. DO-160E). The FLARM software development is commensurate with Level E of DO-178B; in other words a failure of the unit will have no effect upon aircraft operation and does not increase crew workload. The OzFLARM obstruction data bank is not certified.

Air band radio frequency allocation and licensing conditions may vary from country to country. The aircraft commander is solely responsible for ensuring that OzFLARM is operated in conformity with the respective licensing conditions. No licence is required to operate OzFLARM in Australia.

Until further notice OzFLARM may not be used in the USA or Canada without written authority of FLARM Technology, or in aircraft that is registered and/or insured in the USA or Canada. Likewise, operation of FLARM is forbidden in aircraft in which one or more of the occupants resides in or is a citizen of the USA or Canada. Likewise, use of FLARM is forbidden if the aircraft concerned takes off from, makes an intermediate or final landing in the USA or Canada.

RF Developments, its associates, development team, suppliers, manufacturers and data suppliers accept no responsibility for any damage or claims that may arise from use of OzFLARM.

## 12. Technical Data

The following data are provided without guarantee and may be altered at any time without notice.

Height:	25 mm housing (without internal radio antenna) 100 mm overall height (with internal radio antenna)
Width:	75 mm
Length:	111 mm housing (without cable connectors) 119 mm overall length (with push button, without cable connectors)
Weight:	155 g (with internal radio antenna, without cable, without GPS antenna)
Power supply:	external power supply 6.0 to 28.0 (peak voltage up to 30.0) VDC via RJ45, recommended value 12 VDC; direct galvanic link to aircraft battery via an obligatory 500 mA circuit breaker, separated from essential aircraft systems; OzFLARM has a reverse polarity protection
Power drain:	typically approx. 55 mA at 12 VDC, approx. 37 mA at 24 VDC (normal operation without warnings or external display), a collision warning may double these values
Serial data:	bi-directional RS232, compatible with NMEA-0183 Version 2.0, standard message format GPRMC, GPGGA, data rate 4.8 to 57.6 kBaud, additional NMEA proprietary sentences PFLA and PGRMZ (described in a separate document)
GPS:	16-Channel WAAS/EGNOS compatible GPS engine, external 50Ω active antenna with 2.5m RG-174U cable, MCX connector, 3.3V, dimensions depending upon the antenna used, usually rectangular 45x45 to 50x50 mm, oval or circular of approx. 12 mm thickness
Radio:	SRD- -Band 915.0 to 928 MHz (Australia ), other frequencies depending upon configuration less than 1 % Duty Cycle, Peak Pulse Power 10 mW (ERP), internal λ/4 antenna (screw-fitted to conventional SMA connector), Range approx 2 km, possibly up to 5 km, depending upon antenna and installation
Temperature:	Operation: -10 to +60 °C, storage: -20 to +70 °C, no certification in accordance with DO-160E Sections 4 and 5
Intercom:	not provided, suitable third party units are available
Vibration:	Use in conditions of strong vibration or turbulence should be avoided or subsequently checked prior to continued operation, no certification in accordance with DO-160E Section 8
Country of Origin:	Australia

### DECLARATION OF CONFORMITY

Complies with AS/NZS 4268:2003  
Low power transmitting and receiving  
device.




RF Developments N-15142

ABN 60 789 837 451

This device must be operated in  
accordance with the manufacturers  
recommended installation and users  
guide. Under no circumstances should  
this equipment be modified.  
Modifications will render the unit un  
approved and removes all warranties.

Appendix A:

OzFlarm Basics

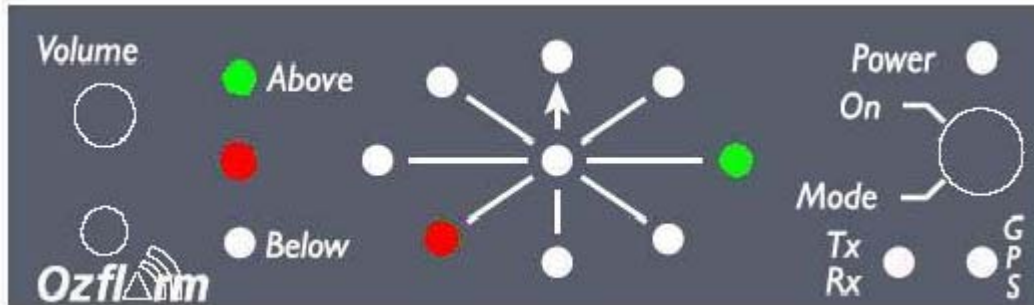

The LED's

ON/OFF	Flashing GREEN at 1 Hz	Input Voltage is within normal limits
	Flashing RED at 1 Hz	Input Voltage is OUTSIDE normal limits
	Off	The unit is turned OFF
GPS	Steady RED	GPS does not have LOCK ( Unit will not transmit )
	OFF	GPS has lock if the unit is powered up
TX/RX	Steady RED	The unit is NOT transmitting its position, usually because it does not have GPS lock
	Steady GREEN	The unit is NOT receiving any other FLARM or OZ-FLARM units but is ready for use
Compass Rose		The COMPASS ROSE displays the relative heading to any aircraft that may be of interest.
Above/Below		Indicates that an aircraft is within a cone directly above or below the aircraft
Plus/Level/Minus		Indicates that an aircraft of interest is on a flight level above, below or on the same flight level

FLARM's range is subject to the antenna installation in the aircraft but usually is around 1 to 3 km, sufficient even for high speed gliding. Alarms and the three alarm levels are issued depending on the forecasted time to impact, not a geometrical distance. The first alarm level is usually issued 18 to 20 seconds, the second one 13 to 15 seconds and the third one 8 to 10 seconds prior to the predicted impact and last as long as the alarm level is appropriate. Depending on the impact forecast, alarm levels might even go down or disappear.

Alarms are highly selective, i.e. they are only issued when there is imminent danger. In an additional information mode called "nearest mode", the user can be informed about other aircraft in the vicinity even when not posing any elevated danger.



# Controls

**Note:**

Initial design allowed the user to manually turn ON or OFF the unit by holding the toggle UP for one second. This feature has now been disabled as it was not practical for remote installations and also in some circumstances the pilot could accidentally remove power and the unit would be disabled ( like when switching from battery one to two ) The unit now power up when power is applied , with the green leds all lighting and a 2000 hz tone, and the red leds lighting and a 1800 Hz tone – this test all the leds and sounds the two tones used.

# Alarm Rose

When ALARM messages are displayed on the Compass Rose, they are ALWAYS RED. A number of Alarm Levels exist

Time to Projected Impact	Alarm Level	Audible Alarm	Flash
8-10 Seconds	3	Yes	Yes
13-15 Seconds	2	Yes	No
18-20 Seconds	1	No	No
> 20 Seconds	0	No	No

The Alarm will sound under the following conditions.

- Alarm Level increases
- Relative Heading changes by more than 30 degrees since the last report, even though the Alarm Level has not changed. [This is an indicator that a 2<sup>nd</sup> plane is in the area, and it is more dangerous at the moment]

### Alarm Acknowledge

The alarm is acknowledged by pressing the switch to the MODE position momentarily.

If you wish to silence the alarm for about five minutes this can be done by pressing the switch to the MODE position for about two to 3 seconds. All the LEDS will light up green for half a second to confirm activation

The COMPASS ROSE will be lit up in 45 degree segments. The segment pointing NORTH is from -22.5 degrees to 22.5 degrees. Other segments line up accordingly.

0°-22.5°	North
22.5°-67.5°	North-East
67.5°-112.5°	East
112.5°-157.5°	South-East
157.5°-202.5°	South
202.5°-247.5°	South-West
247.5°-292.5°	West
292.5°-337.5°	North-West
337.5°-360°	North

Relative Vertical Height	
At least 65m BELOW	BELOW
Less than +/-65m	MIDDLE
At least 65m ABOVE	ABOVE

	Compass Rose Centre LED
Vertical Height > Horizontal Distance	RED
Vertical Height < Horizontal Distance	OFF


## Other Important Planes Rose

The Compass Rose will also display position reports for other interesting planes. Not all planes in the vicinity will be displayed.

Horizontal Distance < 1000 Meters and Vertical Clearance <300 Meters	RED
Outside the above Cylinder	GREEN

0°-26°	North
26°-64°	North-East
64°-116°	East
116°-154°	South-East
154°-206°	South
206°-244°	South-West
244°-296°	West
296°-334°	North-West
334°-360°	North

Relative Vertical Height	
At least 300m BELOW	BELOW
Less than 300m	MIDDLE
At least 300m ABOVE	ABOVE

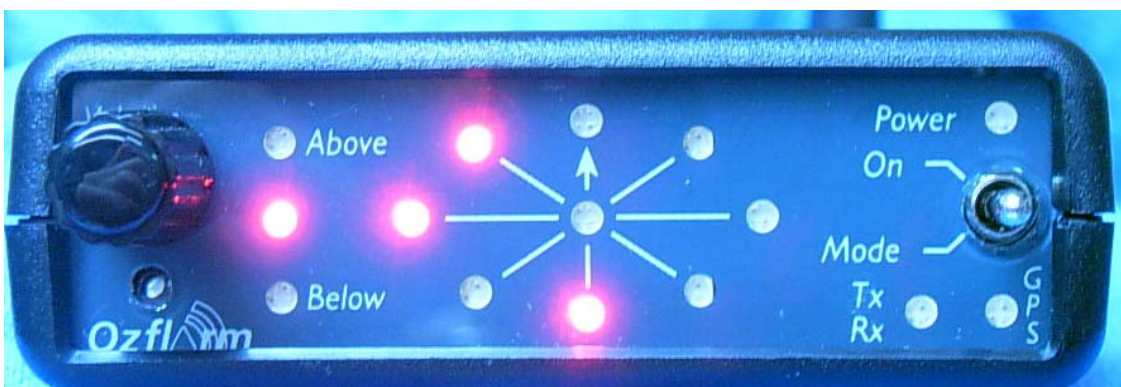

OzFLARM indicating 1 target between immediate left and the next 45Deg led, this means in the area between the 2. This is not necessarily 2 gliders! The bottom Led is indicating a glider behind. The extreme left centre LED indicates all targets are at the same level +/- 65 metres ( 180ft )

**Remember, OzFLARM is an aid to situation awareness, others must be equipped with compatible Flarm/OzFLARM units – so spread the word!**

**You must continue to use good lookout and fly safely.**

---